

# Rear seat


## Seat cushion

### To remove

- 1 Remove the four bolts in the metal strip along the leading edge of the cushion. Lift the cushion out of the car.

### To fit

- 1 Put back the seat cushion and tighten the four bolts in the leading edge of the cushion.

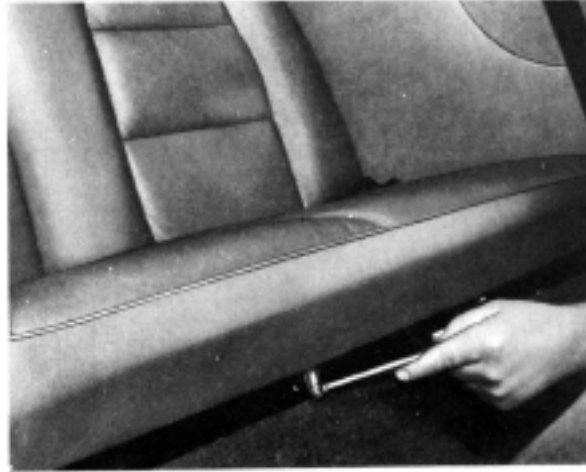


## Backrest

### To remove

- 1 Remove the seat cushion (see above).
- 2 Remove the two bolts securing the bottom of the backrest.



Remove the two bolts securing the top of the backrest and lift the backrest out of the car.

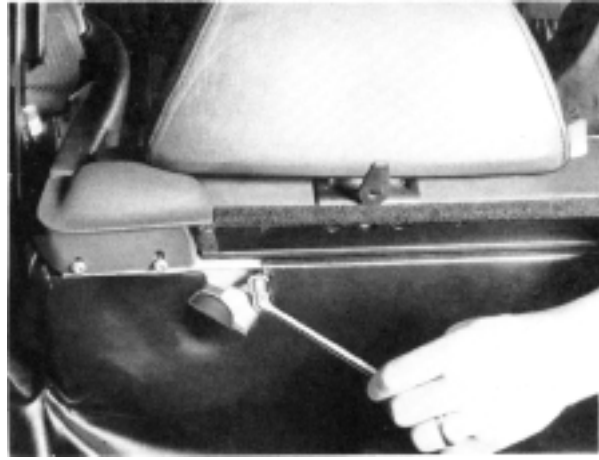

fit

**Lift** the backrest into position and tighten the securing bolts at the bottom of the backrest.



Tighten the securing bolts at the top of the backrest.

Refit the seat cushion

